



# SMART-70

## Standalone Laminator

# Quick Guide



LCD & Buttons

STEP  
**01** Turn on all modules.



STEP  
**02** Press the [Menu] button on Laminator.



STEP  
**03** On "System Config" menu, press the [Select] button.



STEP  
**04** On "Operating mode" menu, press the [Select] button.



STEP  
**05** On "SLAVE" mode in "Operating mode" menu, press the [→] button.



STEP  
**06** Select "MASTER" mode, then press the [Select] button.



STEP  
**07** After system auto-reset, press the [→] button.



STEP  
**08** 1. Set lamination quantity by pressing the [←] & [→] buttons.  
2. Press the [Select] button to start lamination.

